

BREAKER BOX CONFIGURATION

STAGE 2	MAX. 125 amps/phase	220 V	3 PHASE
			Note: Excluding house lights
STAGE 3	MAX. 50 amps/phase	220 V	3 PHASE
			Note: Including house lights
STAGE 4	MAX. 150 amps/phase	220 V	3 PHASE
			Note: Including house lights
WORKSHOP 1	MAX. 125 amps/phase	220 V	3 PHASE
WORKSHOP 2	MAX. 225 amps/phase	220 V	3 PHASE
WORKSHOP 3	MAX. 125 amps/phase	220 V	3 PHASE
STAGE 5	MAX. 100 amps/phase	220 V	3 PHASE
WORKSHOP 5/ALMACEN	MAX. 100 amps/phase	220 V	3 PHASE
TUNNEL I & II	MAX. 150 amps/phase	220 V	3 PHASE
TUNNEL III	MAX. 100 amps/phase	220 V	3 PHASE
TUNNEL IV	MAX. 70 amps/phase	220 V	2 PHASE